


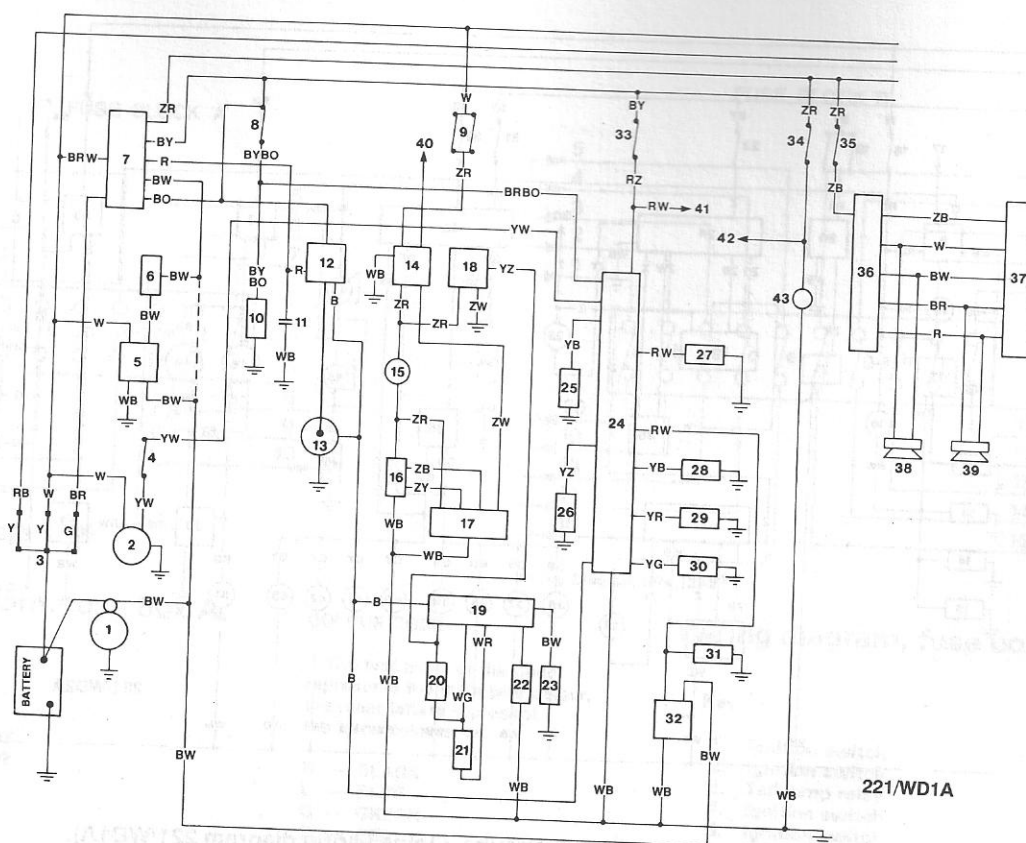


Wiring diagram for starting, charging and instruments circuits. (Joins wiring diagram 221/WD2A).

Key

1. Starter motor
2. Alternator
3. Fusible links
4. Charge fuse
5. Starter relay
6. Neutral start switch
7. Ignition switch
8. Engine fuse
9. Heater fuse
10. Fuel cut solenoid
11. Condenser
12. Ignition coil
13. Distributor
14. Heater relay
15. Heater blower
16. Heater resistor
17. Heater switch
18. A/C switch
19. A/C amplifier
20. A/C pressure switch
21. A/C VSV

22. Thermistor
23. A/C magnetic clutch
24. Warning lamps and gauges
25. Oil pressure switch
26. Fuel warning light switch
27. Handbrake warning light switch
28. Oil pressure sender
29. Fuel level sender
30. Water temperature sender
31. Brake fluid warning switch
32. Bulb check relay
33. Gauges fuse
34. Cigar lighter fuse
35. Radio fuse
36. Stereo
37. Radio
38. Speaker L/H
39. Speaker R/H
40. Not used
41. To reverse lamp switch
42. To clock
43. Cigar lighter

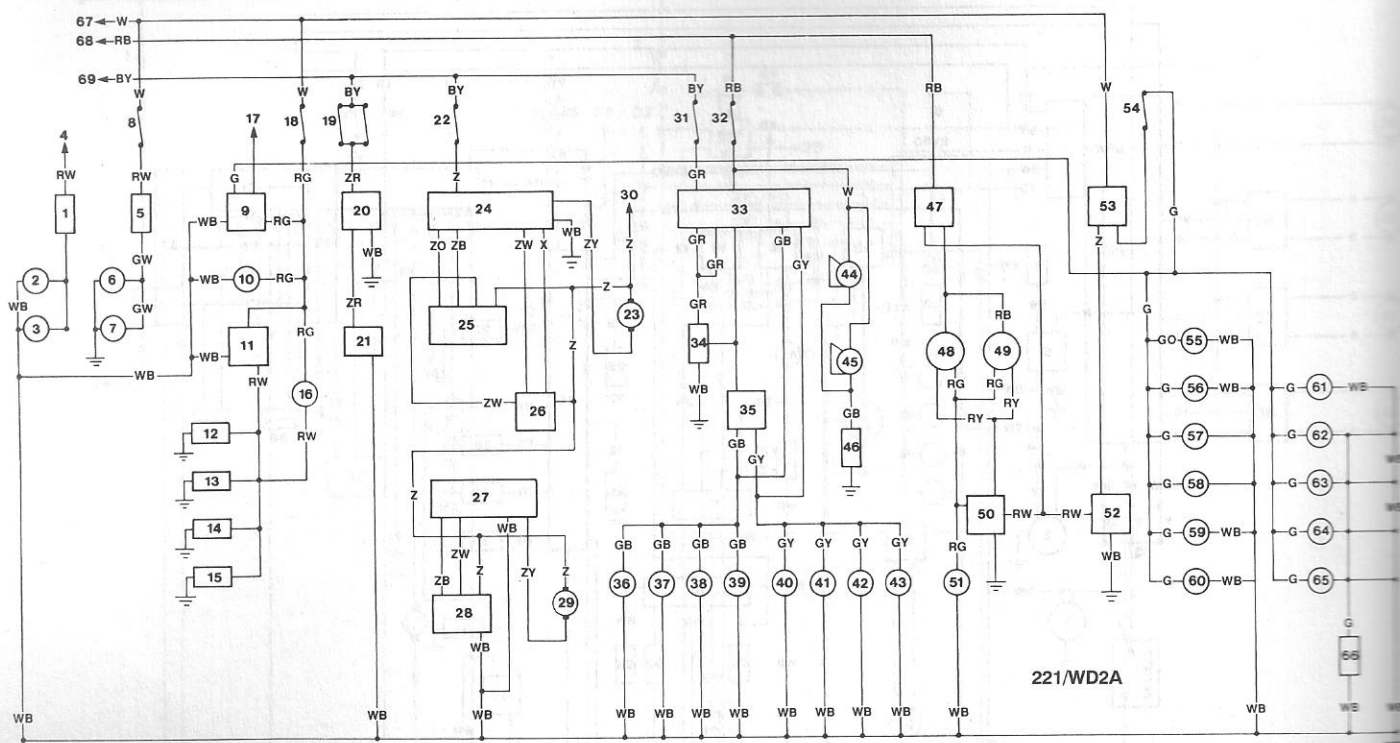

Wiring diagram for lamps circuits. (Joins wiring diagram 221/WD1A).

Key

- | | |
|-------------------------------|----------------------------------|
| 1. Reversing lamp switch | 35. Turn signal switch |
| 2. Reversing lamp L/H | 36. Turn signal lamp (L/H front) |
| 3. Reversing lamp R/H | 37. Turn signal lamp (L/H side) |
| 4. To gauges fuse | 38. Turn signal lamp (L/H rear) |
| 5. Stop lamp switch | 39. Turn signal indicator (L/H) |
| 6. Stop lamp L/H | 40. Turn signal indicator (R/H) |
| 7. Stop lamp R/H | 41. Turn signal lamp (R/H rear) |
| 8. Stop lamps fuse | 42. Turn signal lamp (R/H side) |
| 9. Digital clock | 43. Turn signal lamp (L/H front) |
| 10. Clock | 44. Horn |
| 11. Interior lamp and switch | 45. Horn |
| 12. Door courtesy, front R/H | 46. Horn switch |
| 13. Door courtesy, front L/H | 47. Headlamp relay |
| 14. Door courtesy, rear R/H | 48. Headlamp (L/H) |
| 15. Door courtesy, rear L/H | 49. Headlamp (R/H) |
| 16. Door indicator light | 50. Dimmer |
| 17. To cigar lighter fuse | 51. High beam indicator |
| 18. Dome fuse | 52. Light control switch |
| 19. Defogger fuse (2) | 53. Tail lamps relay |
| 20. Defogger switch | 54. Tail lamps fuse |
| 21. Rear window defogger | 55. Tail lamp (L/H) |
| 22. Wipers fuse | 56. Clearance lamp (L/H) |
| 23. Wash motor front | 57. Licence plate lamp |
| 24. Wash/wiper switch | 58. Licence plate lamp |
| 25. Wiper motor front | 59. Clearance lamp (R/H) |
| 26. Wiper relay | 60. Tail lamp (R/H) |
| 27. Wash/wiper switch (wagon) | 61. A/T indicator |
| 28. Wiper motor rear (wagon) | 62. Meter |
| 29. Wash motor rear (wagon) | 63. Heater control light |
| 30. To heater relay | 64. Ashtray light |
| 31. Turn signal fuse | 65. Clock light |
| 32. Hazard fuse | 66. Rheostat |
| 33. Hazard switch | 67. To battery via fusible link |
| 34. Flasher relay | 68. To battery via fusible link |
| | 69. To ignition switch |