

© CONTROL RELAY







3-GROUND: CONTINUITY (UPPER LIMIT S/W ON)
UNLESS ANTENNA AT UP STOP

2-GROUND: CONTINUITY (UPPER LIMIT S/W ON)
UNLESS ANTENNA AT DOWN STOP



4-3 : CLOSED WITH IGNITION S/W AT ACC OR
IG POSITION AND RADIO S/W ON AND
PLAYER S/W OFF UNTIL ANTENNA AT
UPPERMOST POSITION

1-2 : CLOSED WITH IGNITION S/W AT ACC OR
IG POSITION AND RADIO S/W OFF AND
PLAYER S/W OFF UNTIL ANTENNA AT
LOWERMOST POSITION

1-2 : CLOSED WITH IGNITION S/W OFF UNTIL
ANTENNA AT LOWERMOST POSITION

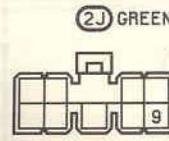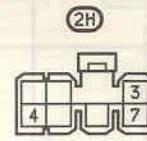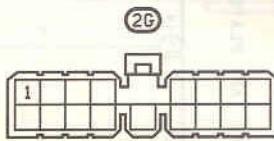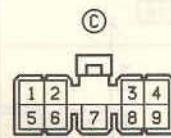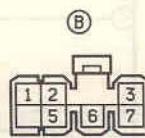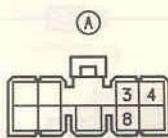

G1 GREEN

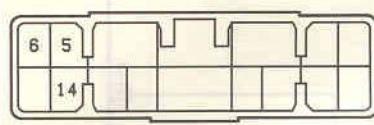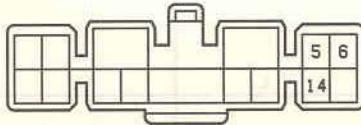

G2

